



# Universal High Beam Remote Activation Switch

Thank you for purchasing XTC Motorsports High Beam Activation Power Relay . No need to add a switch on the dash, this system uses your high beam to activate extra lights.

**For more details on installation go to [www.xtcinstall.com](http://www.xtcinstall.com).**

Please read the instructions fully and familiarize yourself with the components before starting the install. Quick Install Guide.

1. Remove Hood
2. Mount the relay on fire wall with the supplied screw.
3. Using a test light determine which wire is the high beam power wire, using the supplied red tap attach to the wire.
4. Attach the Yellow wire to the tap.
5. Using the supplied Blue Heat Shrink Butt Connector crimp the orange wire to the positive wire on the device that is to be used.
6. Using a heat gun heat the connector ends to seal the wire into the connector, this keeps water and corrosion out.
7. Attach the wire with the fuse on it to the battery post on the factory Busbar, if there is not high power out on the fire wall then you will need to add our Universal power up kit with Busbar(UNI-PWRUP)
8. Hook the black wire to the ground post
9. Verify operation, Turn the key on and put headlight switch on high beam and the accessory should turn on.

**Note: The relay comes with a 20 AMP fuse and can be increased to a 30 AMP if needed or reduced. Install the fuse size that the accessory that is being powered calls out for. Always use what the Manufacture recommends.**

**For more details on installation go to [www.xtcinstall.com](http://www.xtcinstall.com).** We can also be reached by email at [support@xtcmotorsports.net](mailto:support@xtcmotorsports.net)

XTC Power Products  
A Division of XTC Motorsports LLC  
925 N McQueen RD. #101  
Gilbert AZ 85233  
480-558-8588  
[www.xtcpowerproducts.com](http://www.xtcpowerproducts.com)

**Copyright © 2016 XTC MOTORSPORTS LLC, all rights reserved.**