



## 2015 - 2016 RZR Power Adapter

Thank you for purchasing XTC Motorsports RZR Power Adapter for Rear Light Bar, Third Brake Light, Whip Light and License Plate Light. Please read the instructions fully and familiarize yourself with the components before starting the install.

1. Unplug OEM rear light harness located on drivers side rear corner near the belt cover.



2. Plug the adapter into both OEM connectors as shown above.

**WARNING! Keep power wire away from any hot or moving parts.**

**WARNING! Do not exceed the overall power out of the OEM Brake Light or Tail Light system, it is only for low wattage LED lights.**

3. Run the adapter wire to the LED Rear Light, Third Brake Light, License Plate Light or Whip Light.
4. Strip 1/4" off each wire.
5. Using the 3 Heat Shrinkable butt connectors, crimp them onto wires.
6. Crimp the device wire onto other end of butt connectors from harness, Red is Running-Tail Light, Orange is Brake Light and Black or Brown is Ground.
7. Heat Butt Connectors to seal the wires into the connectors to keep connection dry and clean.
8. Using the supplied cable tie's, secure the wire harness to the car once again making sure that the wire is kept away from any hot or moving parts.

**For more details on installation go to [www.xtcinstall.com](http://www.xtcinstall.com)**

We can also be reached by email at [support@xtcmotorsports.net](mailto:support@xtcmotorsports.net)  
To purchase Accessories please visit our web site at [www.xtcpowerproducts.com](http://www.xtcpowerproducts.com)

**Copyright © 2016 XTC MOTORSPORTS LLC, all rights reserved.**

XTC Power Products  
A Division of XTC Motorsports LLC  
925 N McQueen RD. #101  
Gilbert AZ 85233  
480-558-8588  
[www.xtcpowerproducts.com](http://www.xtcpowerproducts.com)