




Honda Pioneer 700/1000 Trailer Out

Thank you for purchasing XTC Power Products Trailer Adapter. Our Kit is Plug & Play™ and plugs into the factory rear light harness.

Please read the instructions fully and familiarize yourself with the components before starting the install. Remember that these are basic instruction and you can install in other locations if needed.

NOTE: When installing make sure that wires are run away from any hot or moving parts and properly secured.


1. Remove both tail lights.
2. Unroll the Harness, start in the rear center under the tailgate.
3. Run the cable with the green wire over to the right rear light and up into the rear light housing and secure with provided cable ties to the frame trunk supports.
4. Run the cable with the Yellow wire over to the Left rear light and up into the rear light housing and secure with provided cable ties to the frame trunk supports.

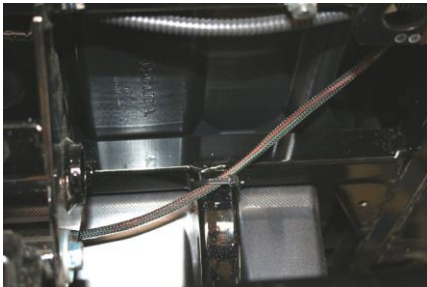

5. Plug the factory light connector into the new harness then plug into light and reinstall light, do the same for the other side.



6. Run the wire down to the trailer hitch.

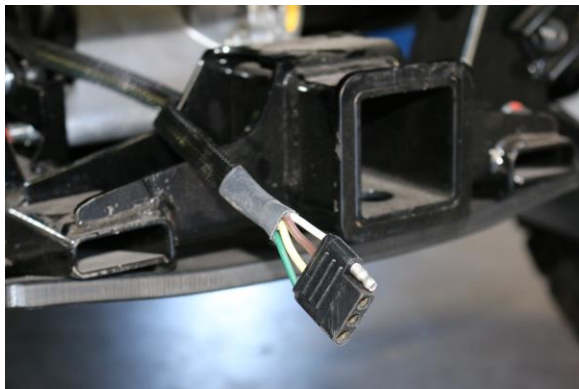

7. Verify operation of adapter and rear tail lights and secure all installed cables with supplied cable ties

For more details on installation go to www.xtinstall.com

We can also be reached by email at support@xtcpowerproducts.com

XTC Power Products
A Division of XTC Motorsports LLC
925 N McQueen RD. #101
Gilbert AZ 85233
480-558-8588
www.xtcpowerproducts.com

*Disclaimer: This Adapter is intended for off road use only and XTC Motorsports claims no responsibility for its use. It is up to the purchaser to make sure it complies with all Federal, State and Local laws.